CDRA - RS485 Control Software Instruction Sheet

Required equipment.

PC running Windows[™] 9x, NT, 2000, Me or XP operating system. Serial port. Rs232 to RS458 converter (e.g. BAX-COM).

Hardware Setup

Connect the RS232 to RS485 converter to the serial port on the PC. Wire the RS485 to the camera as shown in the installation manual.

Software Installation

The software does not require an installation procedure. Just copy the file **RS485 Control.exe** onto the PC in a suitable location (e.g. the Desktop).

Running the software

Run the software by double clicking on the RS485 Control icon.



Configuring the software

Select the number of the serial port RS485 CDR Protocol × **RS485 Address** used by the RS232 to RS485 1 Address converter. Baudrate Baudrate -Select a baudrate to match that **Serial Port** Serial Port selected for the camera. C Com1 C Com2 C Com3 Select the RS485 address of the C Com4 camera that you wish to communicate with. <u>E</u>xit 3

Accessing the menus

The menu system is entered by clicking the \checkmark button.



The menus are navigated using the four arrow keys.

